

*NOTE: WINDOWS 95/98/ME USERS, DO NOT USE ANY ENCLOSED INSTALLATION DISK
THE DISK ENCLOSED IS FOR WINDOWS 3.X ONLY*

1. **Hardware Installation:** Follow the manufacturer's enclosed installation manual to install the controller card and drive. Be sure that cables are installed properly and fully seated.

2. **Hardware Detection and Driver Installation:** Start your computer. Windows 95/98/ME will detect the new hardware and start the installation of the driver software. The *New Hardware Found* window will appear. This window indicates that the software for the SCM Swapbox Plug and Play PCMCIA controller is being installed. Wait for this action to complete.
 - ?? If the *Insert Disk* window appears, insert your Windows 95/98/ME CD or diskette and click on the *OK* button. The *New Hardware Found* window will change. In the *Copy files from* box, type the drive letter containing the Windows 95 CD or diskette and WIN 95/98/ME (e.g. F:\WIN95/98/ME). Click on the *OK* button.
 - ?? When software installation is complete (whether the *Insert Disk* window appears or not), the Windows 95 main screen will appear.
 - ?? Windows 95/98/ME provides the drivers necessary for the Swapbox to function properly.

3. **SRAM Driver Configuration:** Only if you have SRAM cards, follow these steps. Otherwise, go on to step 4.
 - ?? Restart your computer.
 - ?? Point to the *Start* button, click once, then point to *Run* and click.
 - ?? The *Run* window will appear. On the *Open* line, type *sysedit* and then click on the *OK* button.
 - ?? The *System Configuration Editor* window will appear. Click on the *CONFIG.SYS* window and add the following lines:
 - Device = C:\WINDOWS\SYSTEM\CSMAPPER.SYS**
 - Device = C:\WINDOWS\SYSTEM\CARDDR.V.EXE /SLOT=2**
 Note that there is a space after **.EXE** and before **/SLOT**.
 - ? Click on *File* in the menu list, then on *Save*. Click on *File* again, then on *Exit*.
 - ? **Note: For Windows ME operating systems these two lines do not have to be added. There is not a Config.sys file to edit. The operating system will configure the SRAM card for you.**

4. **Configuration is complete:** Restart your computer to activate the drivers: Point to the *Start* button, click once, then point to *Shut Down* and click. The *Shut Down Window* appears. Choose the *Restart the Computer* option and click on *Yes*. After the computer restarts, you are ready to use your new SCM Swapbox PnP PC Card drive.